

## RELAX-A-MIST STEAM EQUIPMENT SPECIFICATIONS

---

**CAUTION:** Please read the installation instructions thoroughly and check that the unit to be installed is the correct size for the steam room before installing any Relax-A-Mist steam equipment. For assistance, please call 1-800-Y-U-STEAM (1-800-987-8326).

### MODEL JR-4

#### ELECTRICAL REQUIREMENTS

Breaker/Fuse Size	50 Amps
Copper Power Supply Wire Size	# 6 AWG
Watts	9,000
Hz	60
Volts	240
Phase	1



#### UNIT MEASUREMENTS

Length	16"
Width	12 1/2"
Height (to top of union)	9"

#### STEAM GENERATOR SELECTION

To select the proper size of steam generator, calculate the cubic footage in the following manner:

1. Depth X Width X Height = CUBIC FOOTAGE. Do not deduct for seating.
2. ADD TO CUBIC FOOTAGE CALCULATIONS FOR WALL AND CEILING MATERIAL ETC:

Acrylic or Fiberglass.....	No adjustment
Ceramic Tile, Cultured Marble, 1/4" thick.....	+ 30%
Ceramic Tile, 3/8" or thicker.....	+ 100%
Glass or glass block wall.....	+ 15%
Natural Stone (marble, onyx, slate) or 1/2" thick material etc.....	+ 100%
Steam lines over 20 feet (insulate heavily) .....	+ 25%
Cast iron tub.....	+ 25%
Exterior walls subject to freezing.....	+ 30%

#### 3. RELAX-A-MIST SIZING:

Model Number	<b>JR-1</b>	<b>JR-2</b>	<b>JR-3</b>	<b>JR-4</b>
Maximum calculated cubic feet	90	175	260	375

4. Line voltage must be specified when ordering. Units available in 240V or 208V, 1 Phase. Single family dwellings usually have 240 Volts AC while condominiums usually have 208 Volts AC. **Note: Use Copper Wire Only.**

#### DISCLAIMER

The above information represents suggestions only. Each steam room is unique. RELAX-A-MIST manufactures steam generators only and therefore cannot warrant information given regarding steam room materials or construction techniques. Final selection of the steam room temperature setting and the duration of stay, is at the discretion of the operators or owners.